


- ① Backrest angle
- ② Backrest height
- ③ Seat angle
- ④ Pneumatic height (cylinder)

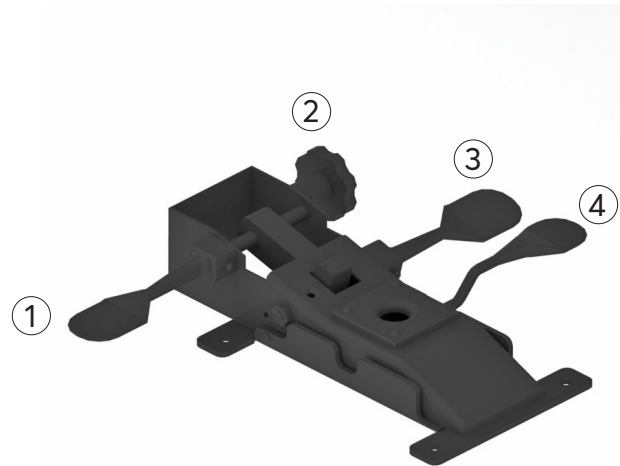

AVAILABLE ON:

- Spyder SM ST
- Lead
- Urbex

To adjust the chair properly, follow these steps:

**Angle of the backrest** - Lift up the handle #1 to adjust the angle of the backrest. Make sure that your back is well supported by the backrest of the chair.

**Seat high adjustment** - Adjust the chair height by lifting handle #4. Choose a height that will allow your feet to lean on the floor and your knees to clear the seat to avoid constant pressure on your knees.

**Backrest high adjustment** - Unscrew the roulette #2 to adjust the height of the backrest to position the lumbar back support at the right spot.

**Angle of the seat** - To tilt the seat forward, lift the handle #3.