 



ROUILLARD

GUIDE D'INSTALLATION INSTALLATION GUIDE


MP TABLE

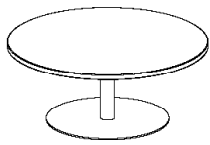

 
MP3615

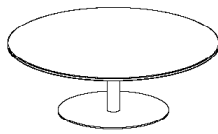


MP4215

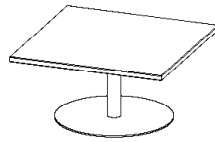 


MP303015

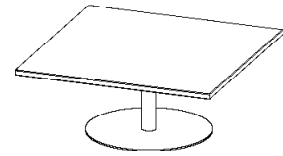 


MP363615

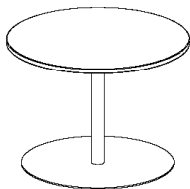 


MP3626

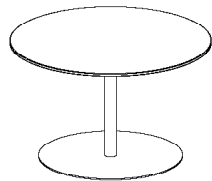 






MP4226

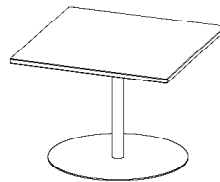 

MP363626

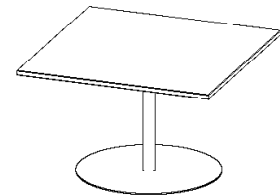 

MP424226

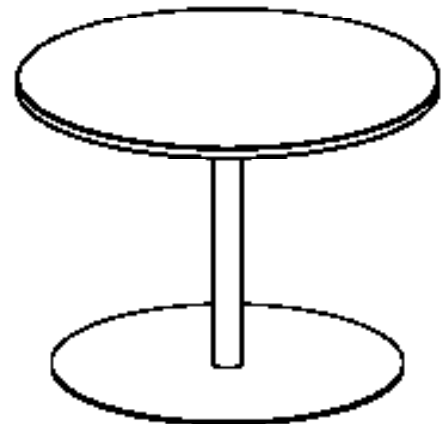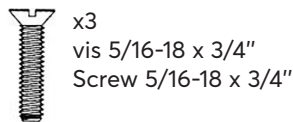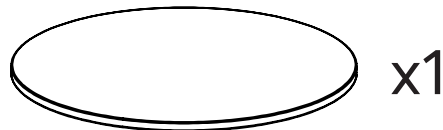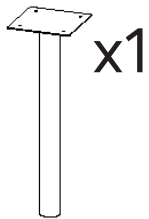     


ROUILLARD

GUIDE D'INSTALLATION
INSTALLATION GUIDE

MP TABLE

 Étape / Step 1

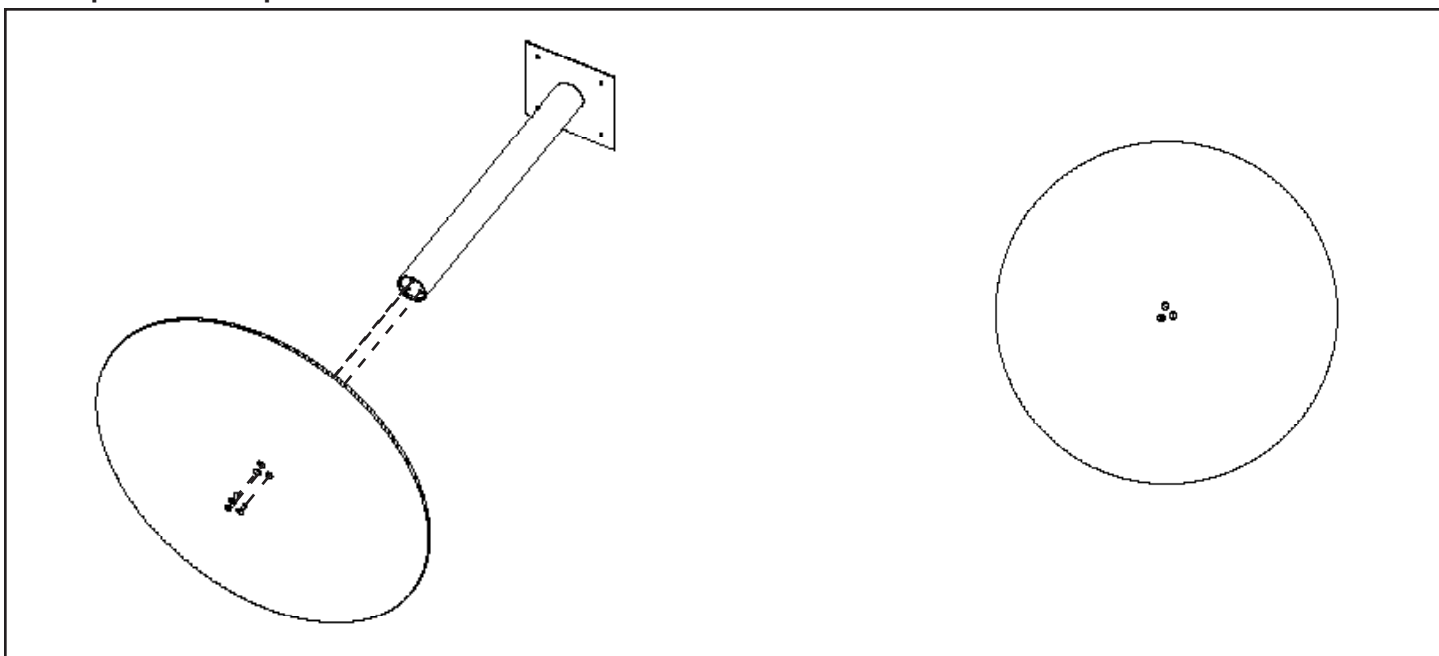

Étape / Step 2

