



ROUILLARD

GUIDE D'INSTALLATION
INSTALLATION GUIDE


MP TABLE

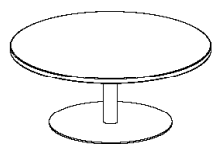


MP3615

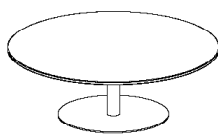


MP4215

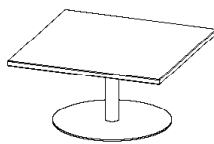


MP303015

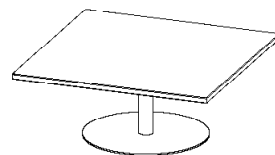


MP363615

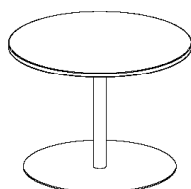


MP3626

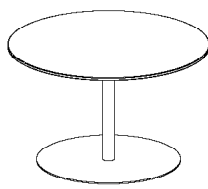


MP4226

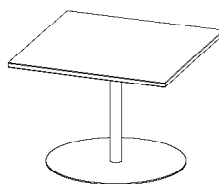


MP363626

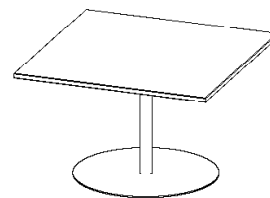

MP424226

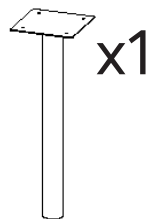

x1

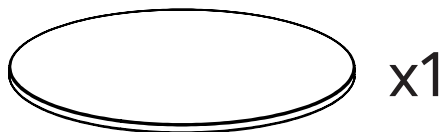

x1




x3
vis 5/16-18 x 1.25" locktite
Screw 5/16-18 x 1.25" locktite



x1



x8
vis 1/4-20x 3/4"
Screw 1/4-20x 3/4"

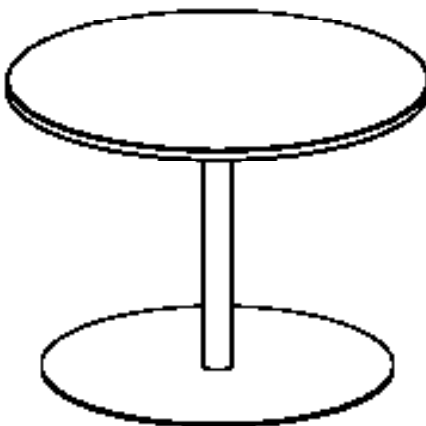


ROUILLARD

GUIDE D'INSTALLATION INSTALLATION GUIDE

MP TABLE

Étape / Step 1

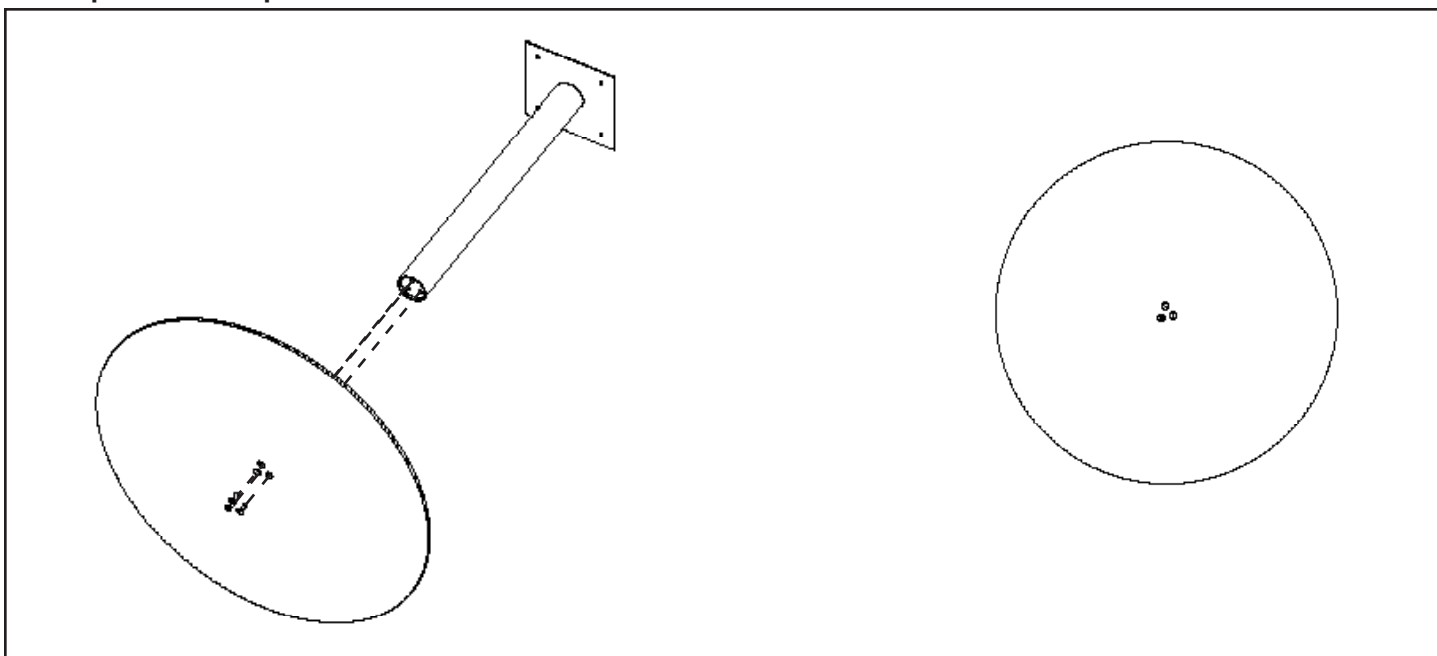

Étape / Step 2

